

APUS MAINS ROLLER KIT

UK



Instructions - Please retain for future use

Place the unit in a safe and dry position and fully unwind the cable.

DO NOT USE THE UNIT UNDER ANY CIRCUMSTANCES WITHOUT FULLY UNWINDING THE CABLE.

Plug the unit into a mains supply (if necessary use UK or Continental Conversion leads available from your dealer).

Please note that a campsite may demand different specifications on electrical products. Keep this product away from children.



WARNING

- Do not connect or disconnect the unit with wet hands and do not disconnect by pulling on the connection cable, always pull on the plug.
- Use the appliance only in the described manner.
- Do not use or discontinue use if the appliance is damaged, especially the lead and enclosure.
- Do not immerse the appliance in any liquids.
- Do not leave or use the appliance near sources of heat or in direct sunlight.
- Do not use the unit under any circumstances without the cable being fully unwound.
- Do not use the connection lead as a handle to carry the unit.





APUS MAINS ROLLER KIT



Instructions - Please retain for future use

Place the unit in a safe and dry position and fully unwind the cable.

DO NOT USE THE UNIT UNDER ANY CIRCUMSTANCES WITHOUT FULLY UNWINDING THE CABLE.

Plug the unit into a mains supply (if necessary use UK or Continental Conversion leads available from your dealer).

Please note that a campsite may demand different specifications on electrical products. Keep this product away from children.



WARNING

- Do not connect or disconnect the unit with wet hands and do not disconnect by pulling on the connection cable, always pull on the plug.
- Use the appliance only in the described manner.
- Do not use or discontinue use if the appliance is damaged, especially the lead and enclosure.
- Do not immerse the appliance in any liquids.
- Do not leave or use the appliance near sources of heat or in direct sunlight.



